



**RED MAGMA**

## CARE & MAINTENANCE

Proper care and maintenance will ensure the longevity and functionality of your chair. This guide provides instructions for cleaning, troubleshooting, and general maintenance.

### General Guidelines

#### *Usage Conditions:*

Use the chair only for its intended purpose.

Avoid standing on the chair or subjecting it to heavy impact.

Do not exceed the specified weight capacity.

#### *Regular Inspection:*

Periodically check for loose screws, bolts, or parts.

Tighten components as needed to prevent wear and tear.

### Cleaning & Care

#### **Fabric Upholstery**

##### *Regular Cleaning:*

Vacuum with a soft brush attachment to remove dust and debris.

##### *Spot Cleaning:*

Use a mild detergent diluted in water.

Apply with a soft cloth, blotting gently. Avoid soaking.

##### *Deep Cleaning:*

Use a professional upholstery cleaner or seek professional services.

#### **Leather or Faux Leather**

##### *Dust Removal:*

Wipe with a dry, soft cloth weekly.

##### *Cleaning:*

Use a damp cloth with a mild soap solution.

Avoid harsh chemicals or abrasive cleaners.





## RED MAGMA

### ***Conditioning:***

Apply leather conditioner once every six months to maintain suppleness.

### **Mesh**

#### ***Vacuuming:***

Use a vacuum cleaner with a gentle setting to remove dust.

#### ***Spot Cleaning:***

Use a mild detergent and soft cloth. Rinse with a damp cloth.

### **Plastic and Metal Components**

#### ***Dust and Dirt Removal:***

Wipe with a damp cloth. For tough spots, use a mild cleaning agent.

#### ***Polishing:***

Use a polish designed for plastic or metal to maintain shine.

## **Adjustments and Maintenance**

### **Gas Lift Cylinder**

Ensure smooth height adjustment by using the lever gently.

If the gas lift loses its effectiveness, it may require replacement.

### **Casters (Wheels)**

#### ***Cleaning:***

Remove debris or hair from the casters monthly.

Use a damp cloth to clean.

#### ***Lubrication:***

Apply a silicone-based lubricant if wheels are not rolling smoothly.

### **Tilt Mechanism**

Adjust tilt settings as per instructions.

Lubricate moving parts every 6–12 months with a light machine oil.

### **Armrests**

Inspect screws or bolts for tightness.

Wipe with a soft damp cloth to clean.

Common Issues and Fixes		
Issue	Cause	Solution
<u>Chair won't adjust height</u>	<i>Faulty gas lift</i>	Replace gas lift cylinder
<u>Squeaky noises</u>	<i>Lack of lubrication</i>	Apply lubricant to moving parts
<u>Uneven or wobbly chair</u>	<i>Loose screws or uneven floor</i>	Tighten screws or use a floor mat
<u>Wheels not rolling smoothly</u>	<i>Debris in casters</i>	Clean and lubricate casters
<u>Tilt mechanism not working</u>	<i>Jammed mechanism or tension adjustment</i>	Check settings or lubricate mechanism